

# Sno-Konette

## Instruction Manual

Deluxe – Model #1002, 1002EX  
Standard – Model #1003, 1003EX



Model #1003  
and 1003EX



Model #1002  
and 1002EX

 **GOLD MEDAL**®

**FUNFOOD EQUIPMENT & SUPPLIES**

Cincinnati, OH 445241-4807 USA

# Safety Precautions



## ⚠ CAUTION

This equipment is designed and sold for commercial use only. This equipment is not to be used by the consumer in home use. Do not allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. Carefully read all installation instructions before operating the equipment.



## ⚠ WARNING

Always wear safety glasses when servicing this equipment.



## ⚠ WARNING

Never put your fingers or any object into the shaver body (the goose-neck) while the motor is running. Serious injury may occur. (*Gold Medal Products does not assume any liability for injury due to careless handling and/or reckless operation of this equipment*).



## ⚠ WARNING

Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment.



## ⚠ DANGER

Machine must be properly grounded to prevent electrical shock to personnel.  
Do NOT immerse the equipment in water.

Always unplug the equipment before cleaning or servicing.

## NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

# INSTALLATION

## MACHINE DESCRIPTION

The Sno-Konette is an automatic shaver with a tremendous capacity. You will find that it keeps up with any demand; as soon as you put ice into the hopper, it is shaved into small ice chips. The Sno-Konette consists of the hopper, which houses the cutter head, the pusher handle, the motor, and the display case.

## ELECTRICAL REQUIREMENTS

The Sno-Konette operates on 120 Volt, 15 Amp, single phase, 60 cycle AC current. The Sno-Konette Export operates on 230 Volt, 50 cycle. Models are available in a 12 volt DC version. Be sure that your electrical supply meets this requirement.

## ICE REQUIREMENTS

The Sno-Konette can take ice cubes or block ice, if you break the block into pieces approximately 3 to 4 inches in size.

**NOTE:** The ice will not enter the shaving chute if the pieces are too large.

# MACHINE OPERATION

## TO OPERATE THE SNO-KONETTE

1. Fill the hopper to within an inch of the top with ice cubes or block ice (no larger than 3" to 4"). The larger the pieces, the better the snow.
2. Switch the motor on. Wait for the motor to come to full speed (a minute or so).
3. Push the pusher handle down against the ice in the hopper. Apply firm and even pressure to make the best snow. Practice will allow you to gauge when to stop pressing. This allows the ice to resettle against the shaver head. You may find that you need to relieve the pressure two or three times in a cycle. Too much pressure will result in snow that is coarse; too little pressure will make the snow mushy.

**NOTE:** Never allow any foreign or metallic objects around the shaver area of the Sno-Konette. Ice picks, scoops, and debris that may be in the ice often damage blades.